



NESPRESSO[®]

DESCALING
GUIDE





IMPORTANT INFORMATION BEFORE YOU BEGIN

Nespresso recommends descaling every 3 months or 300 capsules (whichever comes first).

Nespresso machines should be descaled with a *Nespresso* Descaling Kit which contains a natural solution that thoroughly dissolves the scale build up. Other solutions (such as vinegar or store-bought descalers) may cause damage to your *Nespresso* machine.

Descaling solution can damage or discolor surfaces so we suggest placing something underneath your machine in case a spill should occur. If a spill does occur, please make sure the solution immediately to avoid any damage.

Keep descaling solution out of reach of children.

In case of contact with eyes, rinse immediately with plenty of water for 15 minutes and seek medical advice.

Do not swallow or ingest the descaling solution.

The descaling solution may be irritating to the eyes and skin.

Avoid filling up the water tank during the descaling process.

After descaling, wipe down the machine with a damp cloth.

NESPRESSO®
VertuoLine



VERTUOLINE



Duration: 20 minutes

STEP 1



Fill water tank with **1 packet** of descaling solution and 1/2 tank of water.

STEP 2



With machine plugged in, empty the capsule container and drip tray and place back onto the machine.

STEP 3




Leave the lever in the unlocked position. Press and release button once and wait for steady light.

STEP 4



Press and hold button until you see steady light turn off first, and then start blinking quickly. It may take approximately 7 seconds before light starts to blink.

STEP 5

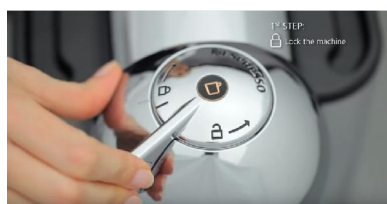


Turn lever to the left to lock the lever, then turn lever back to the front to unlock the lever.

STEP 6



Press and hold the button until the light turns off and then starts blinking quickly again. **Steps 5 and 6 must be completed within 45 seconds.**

STEP 7

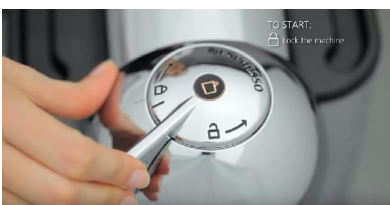

Lock the lever. The light should still be blinking fast. This is an indication that you have entered descaling mode. If not, start over from Step 3.

STEP 8



Place 20 oz. receptacle underneath spout. Press and release button once to begin descaling. Light will continuously blink throughout the process. Machine will dispense solution intermittently.

STEP 9



Once the solution has finished running through, machine should be silent. Discard the solution and return the empty receptacle underneath the coffee spout.



STEP 10



Rinse water tank. Refill with $\frac{2}{3}$ fresh water and place back on the machine. Press and release button to start the rinsing process.

STEP 11



The machine will stop making noise once the water tank is completely empty. Discard the water from the receptacle.

STEP 12



Once the water tank is empty, press and hold the button until the blinking light becomes steady. This may take approximately 7 seconds.

STEP 13



Refill the water tank and place it back onto the machine.

STEP 14



Empty and rinse the capsule container and drip tray and reinsert.

STEP 15



Wipe down the machine with a damp cloth. Let the machine rest for 10 minutes. The machine is now ready for use.